

To assemble the template:

Use the rulers printed on the pages to confirm that your printer and Adobe's printing software are set to print at actual size without enlarging or reducing anything.

Align the four pages using the lines and numbers as a guide. Trim off the white margins on the inside corners of upper pages when necessary.

Tape the four parts together with clear tape.

Cut around the perimeter of the template shape and your template is ready to be traced on the counter top.

The picture on part 3 shows what the template will look like assembled and cut out.



2
1

4
3

THE ONYX COLLECTION

Drop-In Bar Sink

1. Position template on countertop.
2. Measure to make sure it is straight (printed lines should be parallel to front and sides).
3. Trace template onto countertop.
4. Drill a pilot hole, and use a jigsaw with a coarse tooth metal cutting blade to cut along the inside of the traced line
5. Use the 100% Silicone adhesive provided to attach the sink to the countertop, and seal the seam around the outside.
6. It is best to let the silicone cure for 24 hours before attaching plumbing and using sink.



2

1

3




N

+

T

3

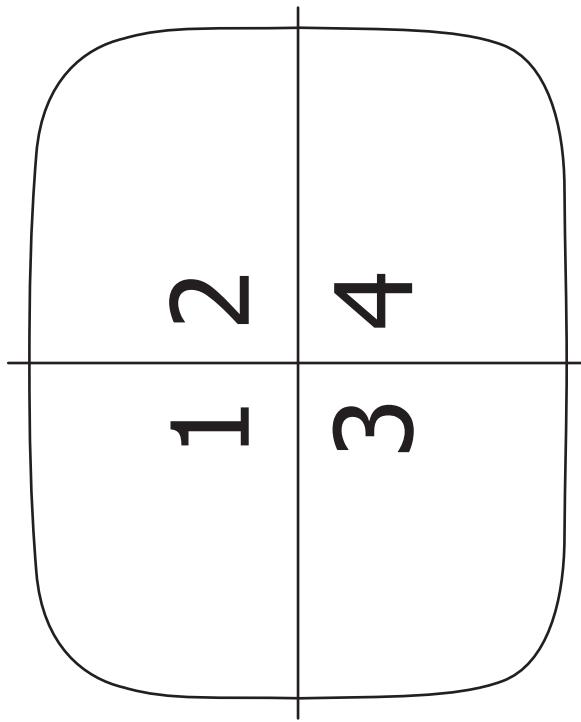


N

+

L

M

This is a template for just the bowl
on the drop-in bar sink.

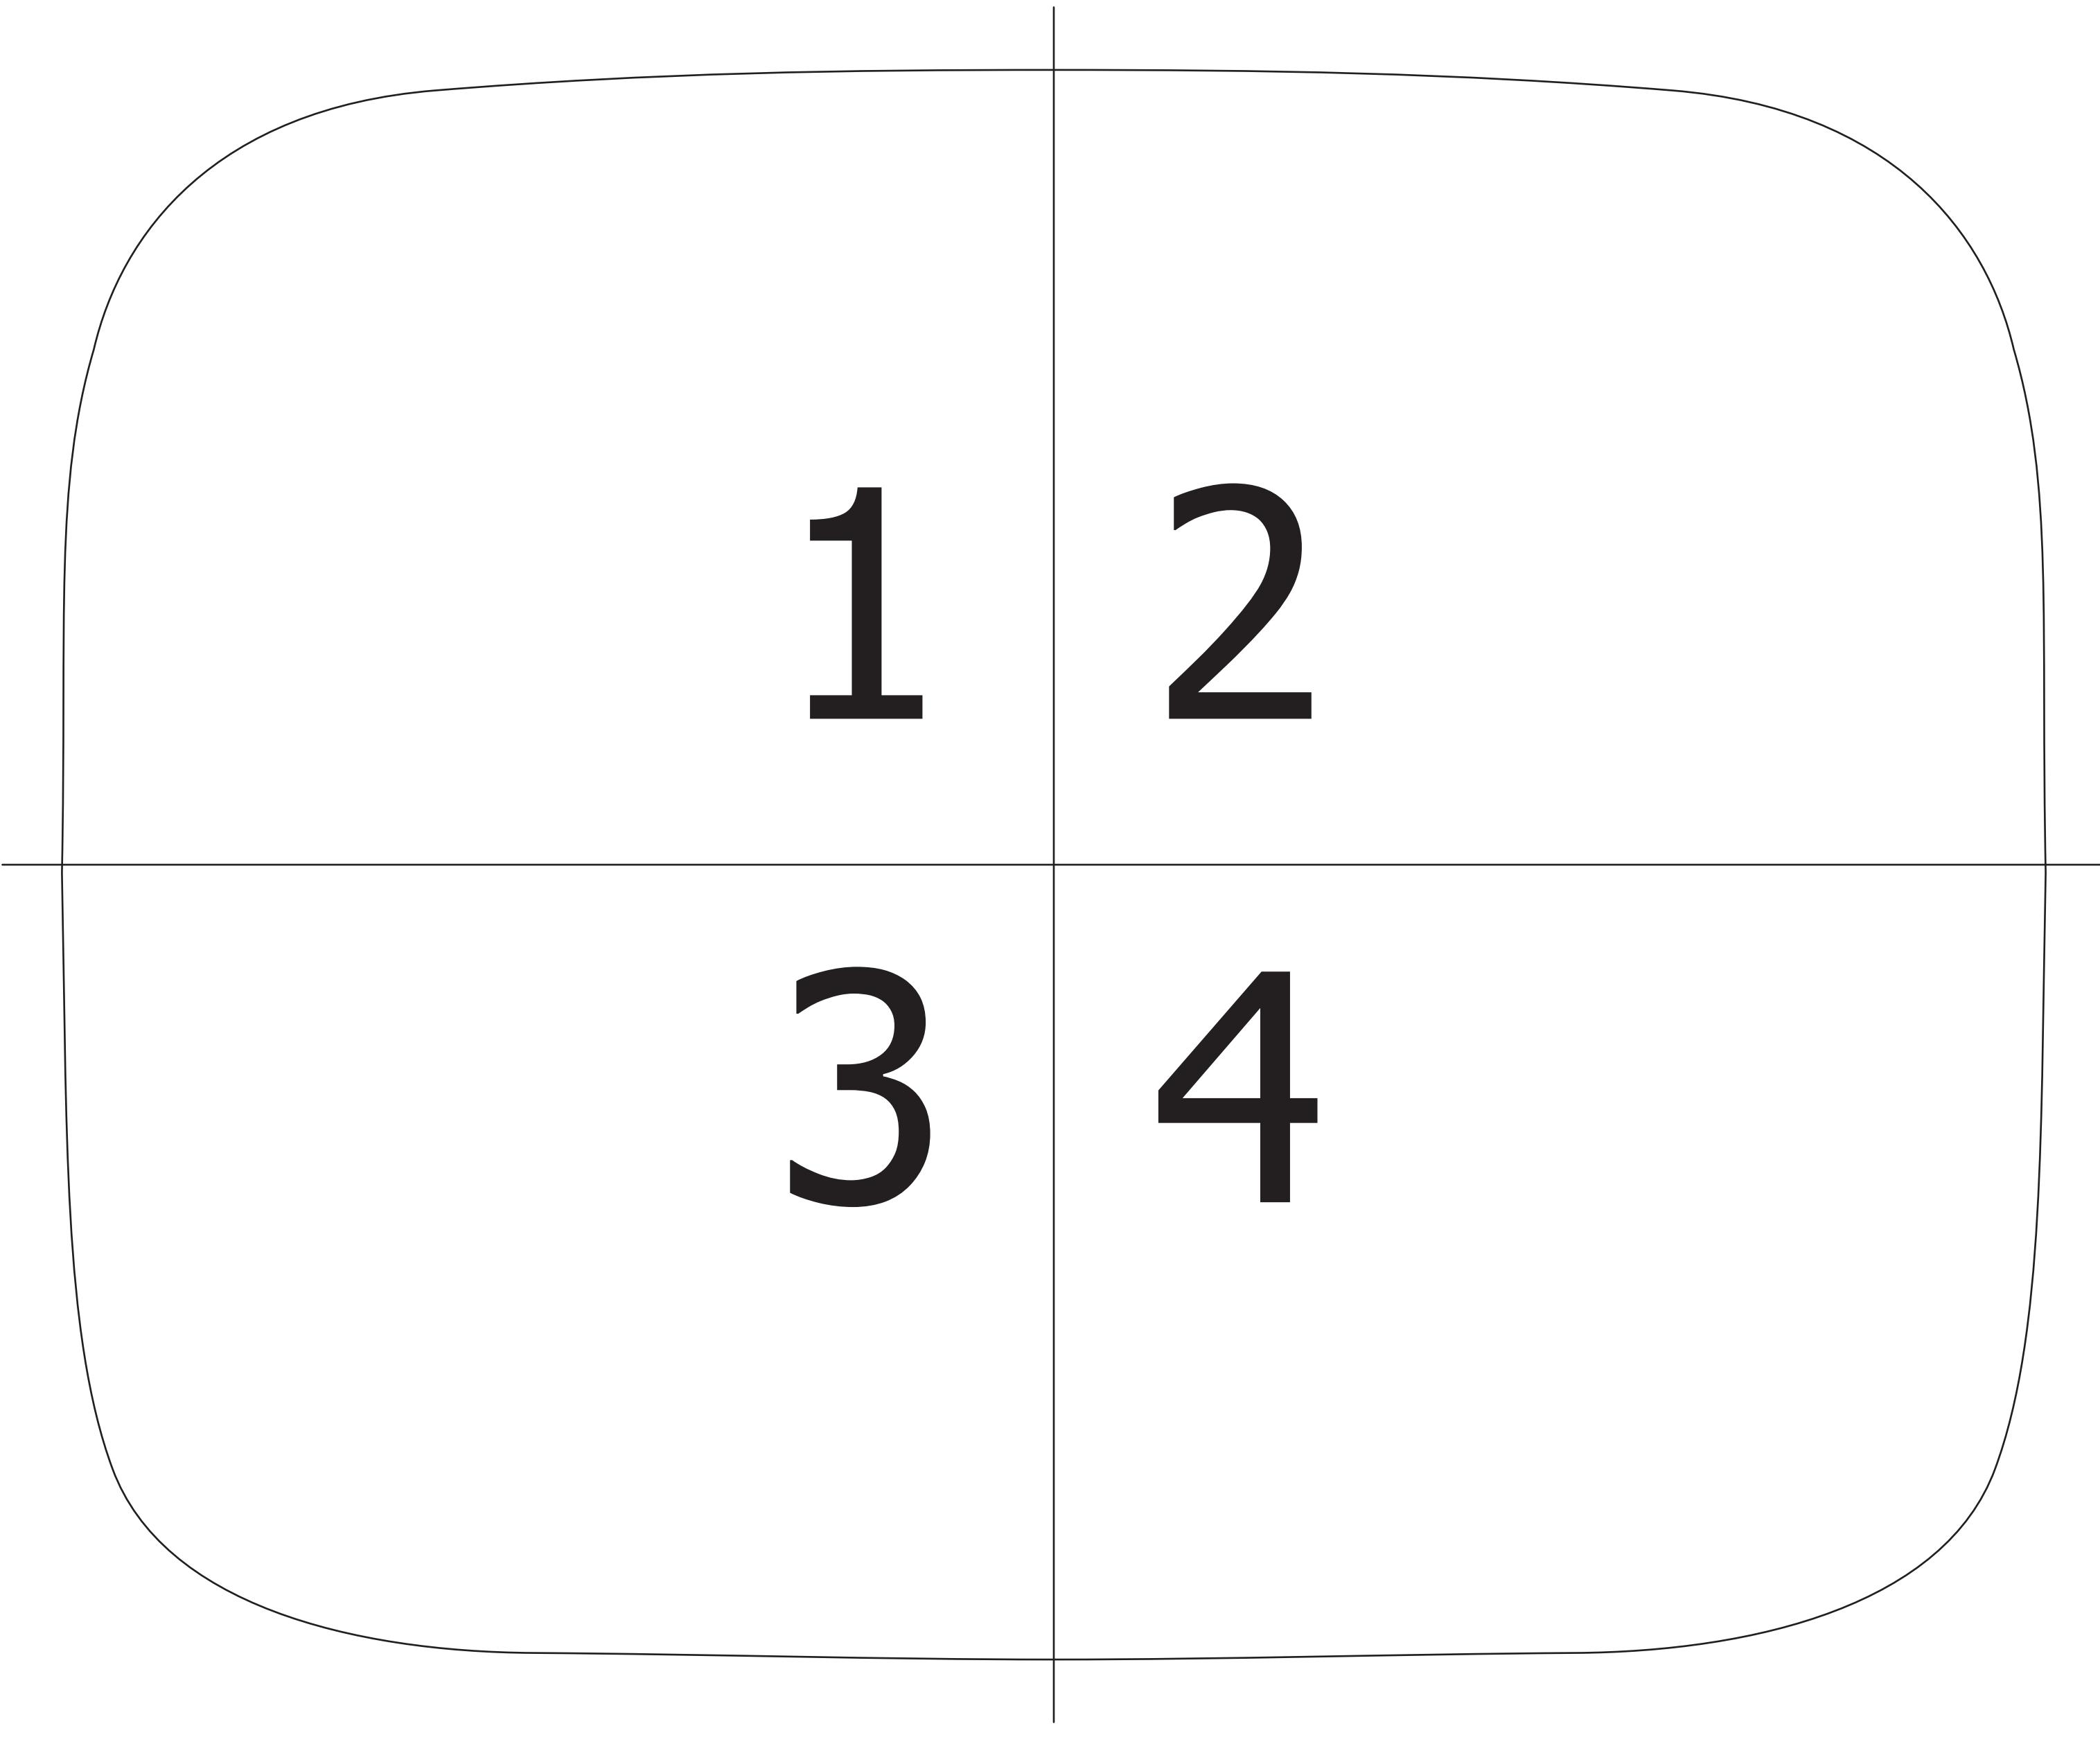

front