



# INSTALLATION INSTRUCTIONS


---

105 Broadway St. Belvue, KS 66407  
Phone: 800-669-9867 Fax: 800-393-6699  
[www.onyxcollection.com](http://www.onyxcollection.com)





## **PL-90 Frameless Single Door Shower Enclosure**

# PARTS LIST

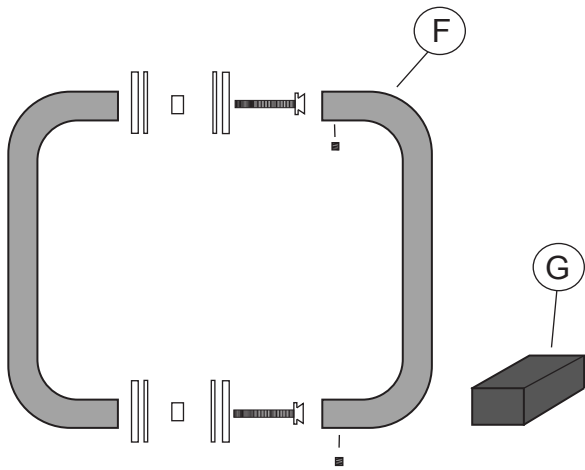


- A) Door Panel
- B) 2 Hinges
- C) 8 Polished Pan Head Screws
- D) 8 1/4" Anchors (Grey)
- E) Drip Sweep
- F) 8"x8" Handle
- G) 2 1/2" Setting Blocks
- H) 1 Tape-On Bubble Vinyl
- I) 1 Tape-On T Vinyl

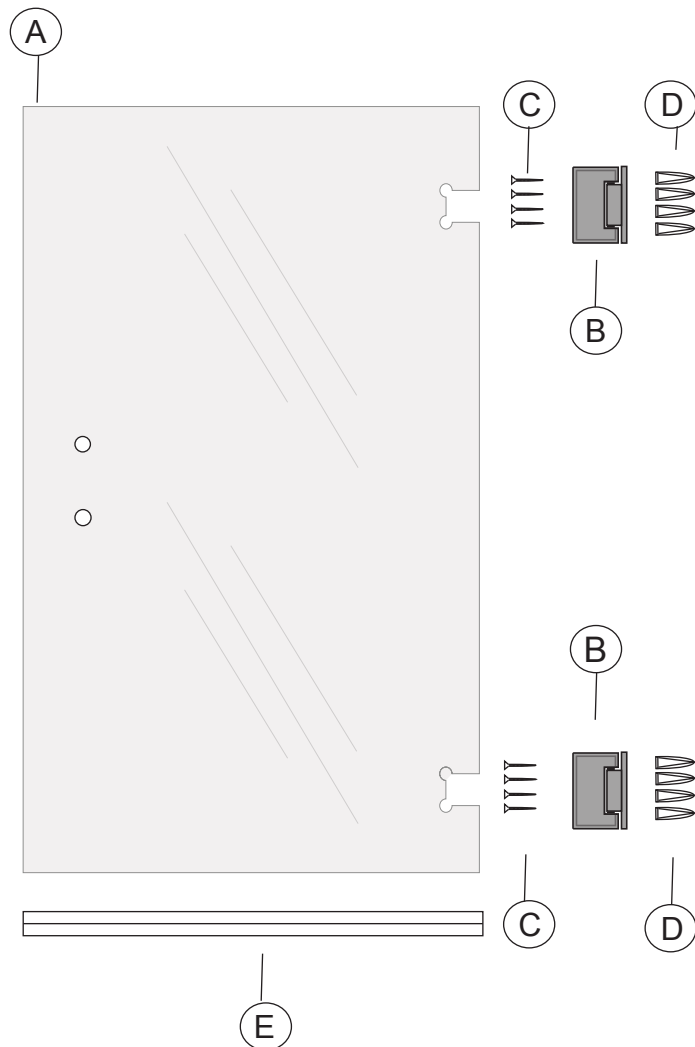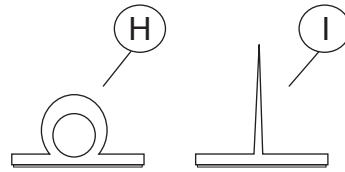

# INSTRUCTIONS


## NOTES:

- You want your walls to be as plumb as possible.
- On the hinge wall you will need to have wood backing to support the hinges.

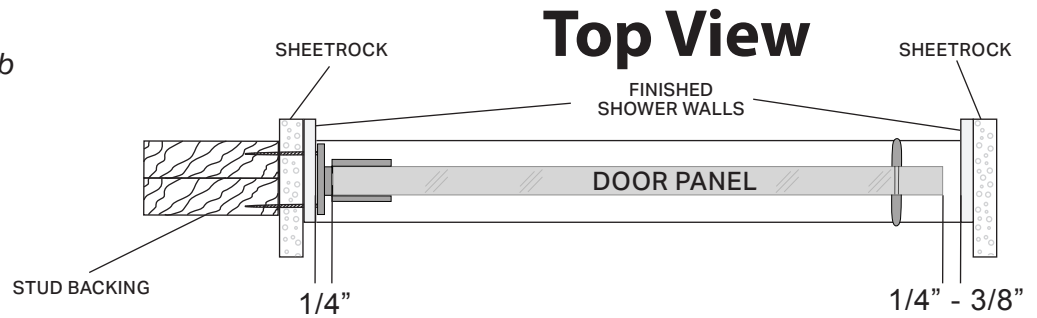

## Step #1: Installing the Door Panel


### 1a: Attaching the Hinges to the Glass

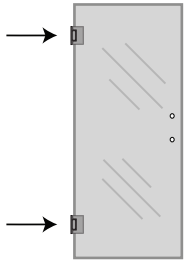

#### Parts Needed:


Door Panel [A], Two Hinges [C]

- Remove faceplate from the Hinge.
- Place hinge body into the notch in the glass Door Panel and reassemble the Hinge, tightening the Allen Bolts on the faceplate.
- Only partially tighten the Hinges so that they do not move. They can be fully tightened after the hinges are attached to the wall.

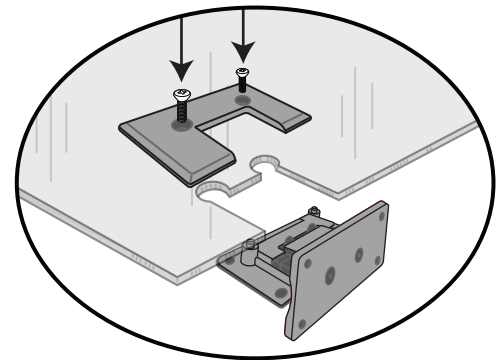

**Note:** The screws on the Hinges should be shown on the inside of the shower (for cosmetic purposes).


### 1b: Marking and Drilling the Holes for the Hinges

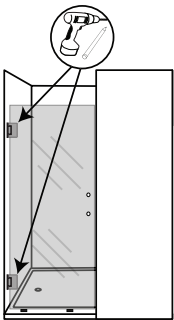


#### Parts Needed:

Door Panel [A], Setting Blocks [L]

- Place the 1/2" Setting Blocks on the curb of the base.
- Set the Door on the Setting Blocks centered on the curb.
- Using a level plumb up the Door on the wall and mark the holes in the Hinges.
- Remove the Door and drill the holes.

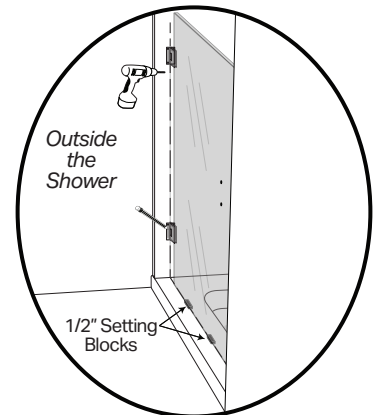


### 1c: Attaching the Hinges to the Wall

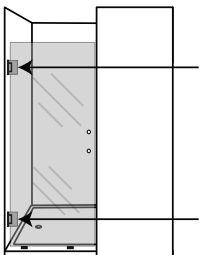

#### Part Needed:


Door Panel [A], Setting Blocks [L]

- Place the Door back on the Setting Blocks and screw the hinges into the wall.

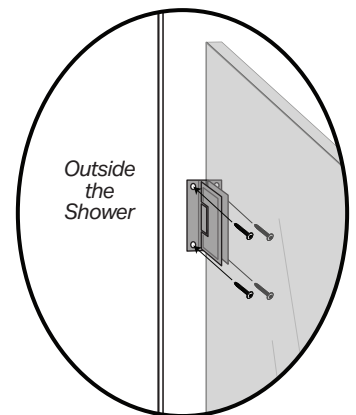


# Step #2: Finishing Up

## 2a: Installing the Handle

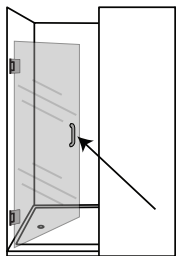


Parts Needed:  
Handle [F]

- Loosen set screws using a small allen wrench (BE CAREFUL NOT TO UNSCREW ALL THE WAY!), then remove handle and unscrew cone head screws.
- Place one plastic washer and one plastic bushing onto the cone head screw, slide screw through the top hole in the glass door, next place one plastic washer onto the screw then attach handle (do not tighten all the way.)
- Repeat above step for bottom hole then tighten all the way.
- Slide handle over cone head screw then tighten set screws using the allen wrench.

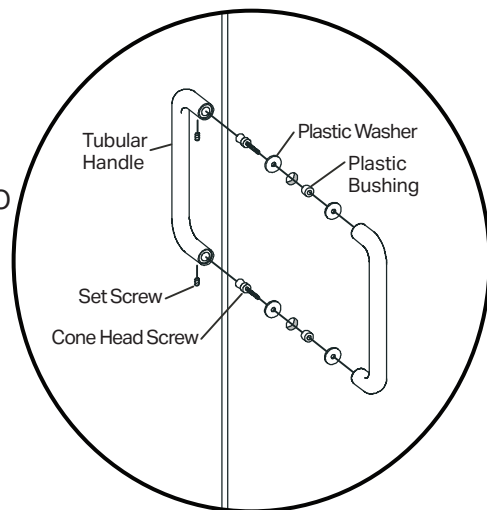


## 2b: Installing the Drip Sweep

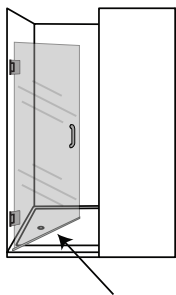


Parts Needed:  
Drip Sweep [E]

- Cut the bottom Drip Sweep so that it will extend all the way from wall to wall.
- Trim the hard U part of the Sweep so that it clips on the door at exactly the glass size.
- Slide Drip Sweep onto bottom of door panel so the deflector leg is to the interior of the door.

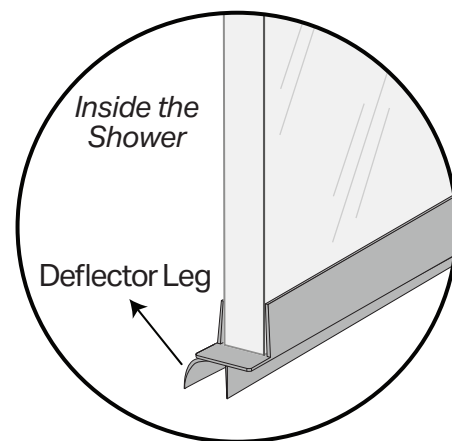


## 2c: Installing the Optional Vertical Vinyls

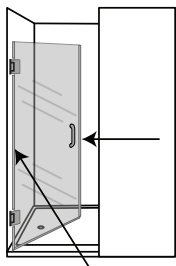

Parts Needed:  
Vinyls [H], [I]

- Measure the gap between the Door Panel and the wall on the handle side and choose appropriate Vinyl.
- Typically the T-Vinyl will be used on handle side and the Bubble Vinyl on the hinge side.
- Clean and degrease edge of glass.
- Cut the Vinyl to length (the vertical Vinyls should go to the top of the glass to just on top the drip sweep.)
- Remove the tape backing and carefully press the Vinyl onto the edge of the door panel.
- Repeat steps for the hinge side of door panel.

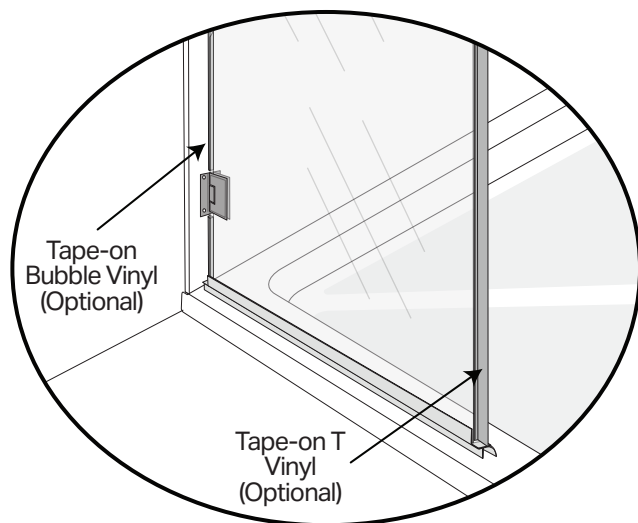

### Suggested Gaps for Use

