

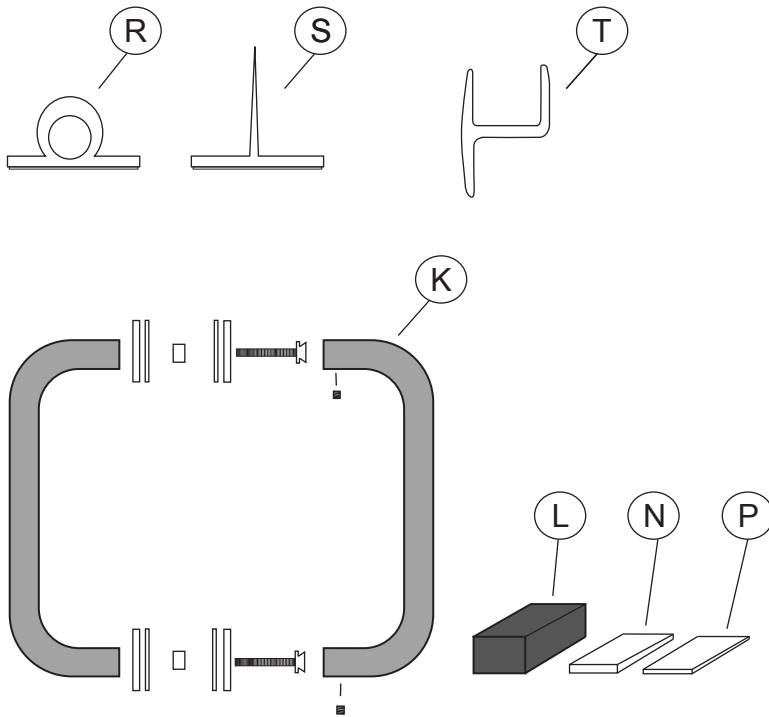


FULLY FRAMELESS DOOR - PARTS LIST

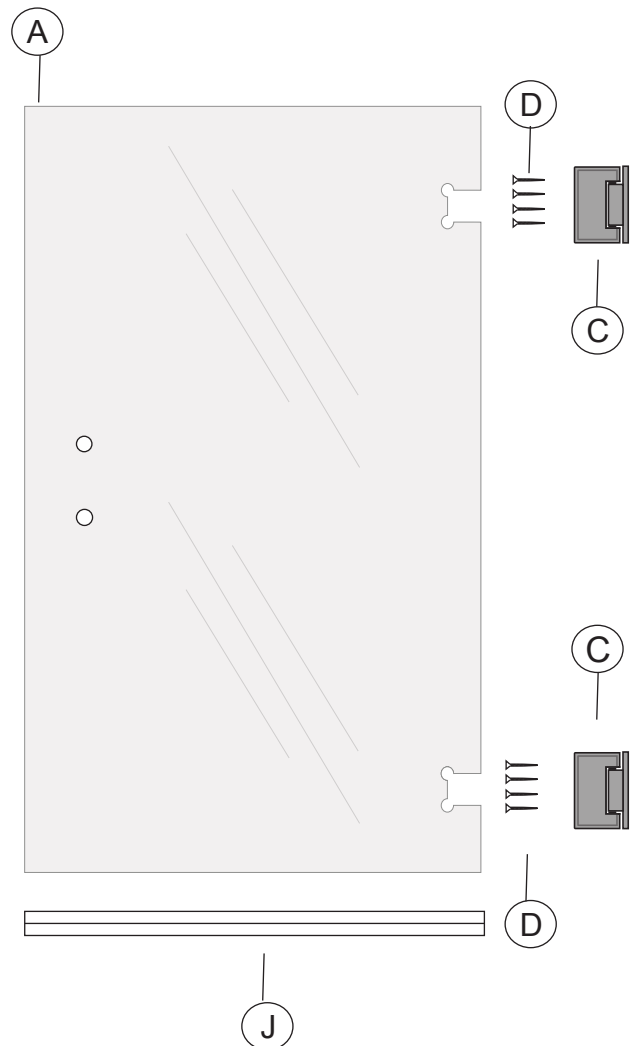


- A) Door Panel
- B) Side Or Notched Panel
- C) 2 Hinges
- D) 8 Polished Pan Head Screws
- E) 1/4" Anchors (Grey)
- F) Bottom Channel w/ double stick tape
- G) Wall Jamb w / holes
- H) 2" Pan Head Screws
- J) Door Sweep
- K) 8"x8" Handle
- L) 1/2" Setting Blocks
- N) 1/8" Clear Setting Blocks
- P) 1/16" Setting Blocks
- R) 1 Tape on Bubble Vinyl
- S) 1 Tape on T Vinyl
- T) 1 Clip on H Vinyl

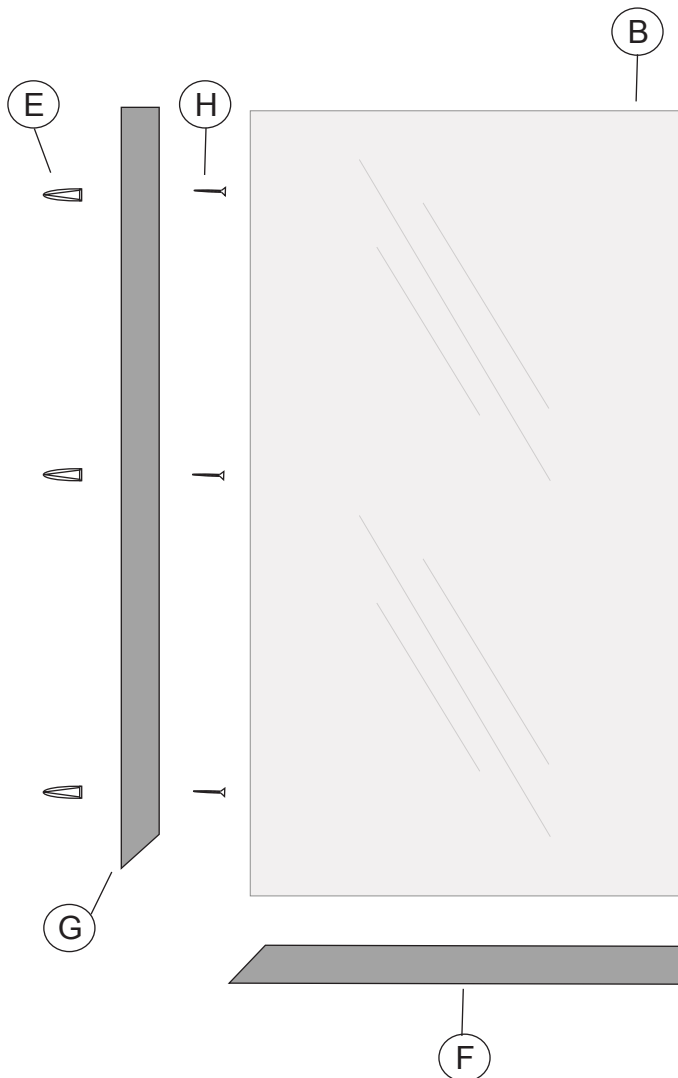


HARDWARE SPECS

Door Handle

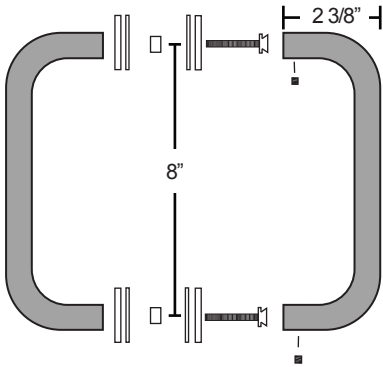

Glass Hole Specifications

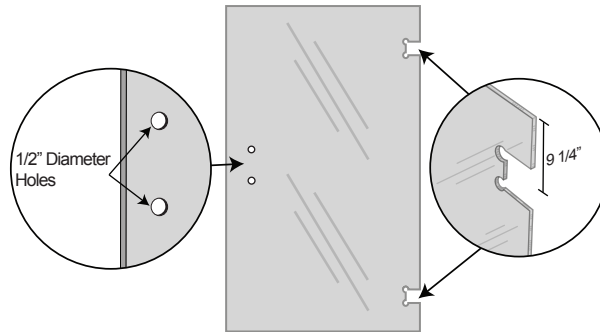

Installing Gap Vinyls


(Measure the gap between the door panel and the side panel. Choose the appropriate vinyl.)

Bubble Vinyl



5/16" - 7/16"


T Vinyl

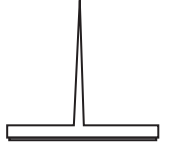

3/16" - 1/4"


LD Door Hinge

(Up to 28" Doors)

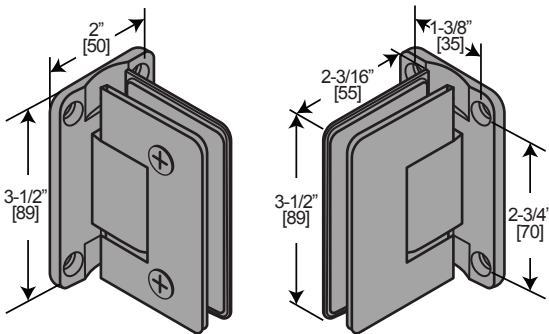


HD Door Hinge

(Over to 28" and up to 36" Doors)

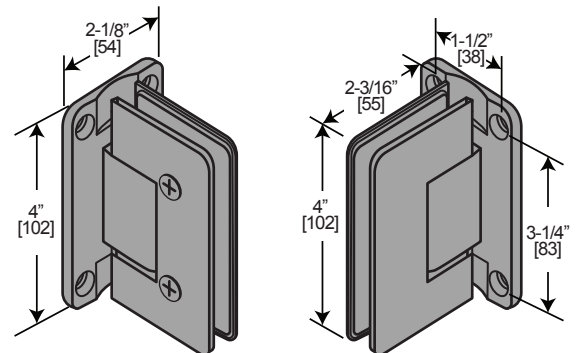


MOUSE EAR TEMPLATE

Wall-Glass Clearance = 1/8" [3mm] to 3/16" [5mm]

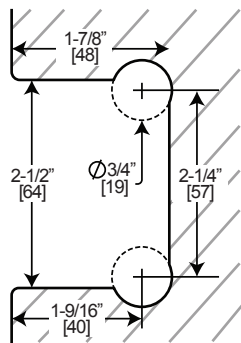

MOUSE EAR TEMPLATE

Wall-Glass Clearance = 1/8" [3mm] to 3/16" [5mm]

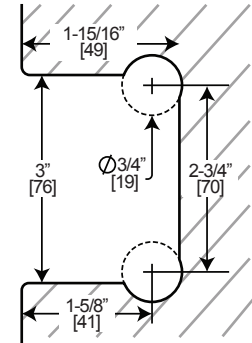

Bottom Channel:

Black, ORB, Brushed Nickel, Chrome and Brushed Brass

